

StabiLift Automatic 1



One set of StabiLift Automatic consists of:

Lifting device

Lifting hook

Lever

Top Bow

4-point head

Safety Belt

Weight: 10 kg

Weight incl. accessories: 16 kg

Lifting capacity: The tool has been tested with 4 000 kp, this allows a load of 2 000 kg from the shortest to full length.

The lift hook can take a load of 1 000 kg, up to hole No 5 in the bottom extension. The top extension can be fully extended with this load. From hole No 6 – 8 a load of 750 kg is allowed with the top extension fully extended.



The shortest working length is 101 cm. When the hook is mounted the distance between the ground and the hook is 11 cm. Always extend the bottom extension first if the distance between the ground and the object to be lifted is more than 11 cm.



The bottom extension can be extended by 8 holes á 75 mm between the holes. That means the bottom extension can extend the tool 600 mm.

The top extension that comes out automatically with the help of a gasspring will extend the tool 500 mm. This will give the tool a working range from 101 cm to 151 cm.

If both the bottom extension and top extension are used, the working range will be 101 cm – 211 cm.


StabiLift Automatic 1 has a gasspring mounted in the pipe which will push out the top extension with a pressure of 25 kp. The tool is equipped with a automatic locking system which stops the tool from going back when the gasspring extends it. With help of a level it's possible to lift a load around 1 000 kg or lower the tool when it's under load.

To lower the tool when it is under load:

Put the lever in the second free cog, press down the lever, release the backlatch and now lower the level. As soon as the backlatch is on the top of the next cog take the hand away from it and continue to lower the tool until the backlatch stops it. Then move the lever one cog up and repeat the procedure.



Backlatch

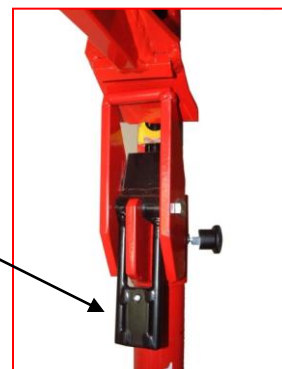

To press down the top extension when it is extended:

Put one hand on the top of the tool (see pictures). Press in the backlatch with the other hand. Now push down the top extension all the way down until the automatic lock clicks in and locks it.

How to release the top extension:

Press down on the top of the tool (see picture). Pull out the lock knob with the other hand. Let the tool out slowly and place the top where to lift.



To lift with the tool (only when it is under load):


Put the level in the first free cog (see picture).
Press the level down until the backlatch locks in the next cog. Then repeat the procedure.



WARNING!

When the yellow area on the top extension is fully visible, do not lift more with the lever.


The gasspring can be damaged.

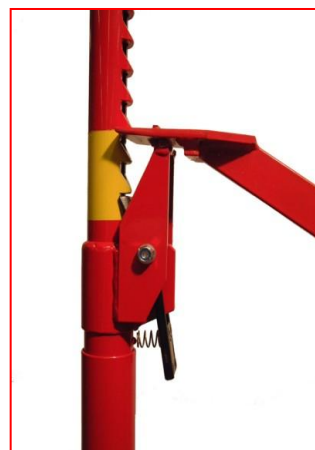

To change the top accessories on the tool:

Pull out the lock knob, lift out the top accessory and put in a new.

Be sure the lock knob is locking properly.

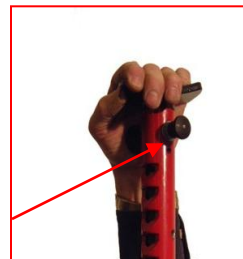

Lock knob

STORAGE:

The tool has to be stored with the top-part higher than the foot. This keeps the oil to the gaskets in the gasspring. The lifetime of the gasspring will then be maximum.

Made by: **REIPAL AB**, Box 183, 243 23 Höör, Sweden
Tel: +46(0)413-249 48 Fax: +46(0)413-249 84